

# Read Before Installing Everpure® Water Filters

## DO NOT

- NEVER use a saddle valve!
- Do not use 1/4" O.D. tubing to and from filters!
- Do not connect to condenser water on ice machine applications.

## DO

- DO FLUSH! See reverse.
- Do use correct size tubing.
- Do size correctly.



**EVERPURE®**

**2375 Sanders Road  
Northbrook, IL 60062**

**(847) 205-6000 • FAX (847) 205-6030  
Technical Service (800) 942-1153**

### IMPORTANT NOTES TO INSTALLER


1. To avoid cracking the head assembly, always use a back-up wrench when installing fittings.
2. Do not apply heat to any fittings on this water filtration system.

P/N EV3030-83F



# FLUSH filter cartridges when installing and changing


1. Shut off power to machine. Shut off inlet water.

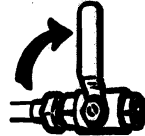


2. Open chrome flushing valve.  
Leave open for full flow.



3. Install cartridges.

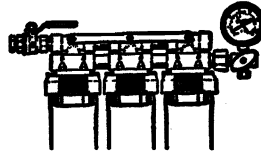

4. Turn on water to system. Run five minutes to  
drain!

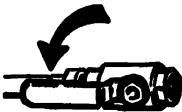

5. Close flushing valve.



6. Turn on power.

