

by **EVERPURE**



Figure 1 – Follett Single System



Figure 2 – Follett Twin System

SELECTING A MOUNTING LOCATION

1. Give consideration to the weight of the unit when operating (filled with water). Operating weights of the Follett Systems are:
 - Single System (00130229) – 13 lbs. (5.89 kg.)
 - Twin System (00130286) – 36 lbs. (16.32 kg)
2. The location should allow for:
 - Minimum clearance of 2½" under the cartridge(s) so it can be lowered for removal and replacement.
 - Adequate space for "in" and "out" water line connections.
 - Be near a drain for flushing.

OPERATING SPECIFICATIONS*

Combined Model Name	Replacement Cartridge	Flow Rate	Capacity
Follett Single – FL4S (00130229)	FL4S (00130245) – 1 required	0.5 gpm (1.9 lpm)	3,000 gal (11,400 L)
Follett Twin – FL4S (00130286)	FL4S (00130245) – 2 required	1.0 gpm (3.8 lpm)	6,000 gal (22,800 L)

* For individual cartridge specifications, refer to cartridge literature.

Connections: Follett Single – 3/4" FNPT inlet and 3/8" FNPT outlet
 Follett Twin – 3/4" FNPT inlet and outlet

Temperature: 35–100°F (2–38°C)

Pressure: 10–125 psi (0.7–8.6 bar), non-shock

For cold water use only.

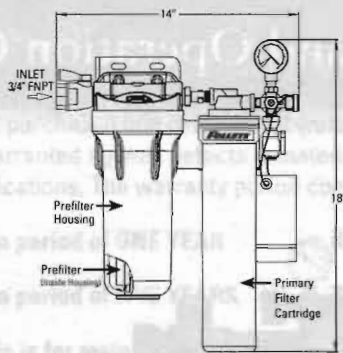


Figure 3 – Follett Single (00130229)

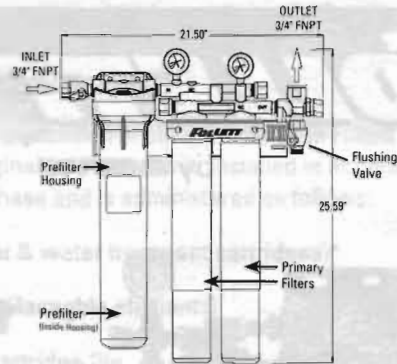


Figure 4 – Follett Twin (00130286)

INSTALLATION

1. Use the predrilled mounting holes in the manifold bracket as guides. Mark and drill anchor holes. Mount securely. See Figures 3 & 4.
2. Shut off power to equipment.
3. Connect outlet port of system to equipment served. Always use a NSF approved pipe dope or Teflon tape at all connections. Use a backup wrench on all fittings while connecting to avoid excessive stress on the system components.
4. Install a manual shut-off valve leading to the system for servicing.
5. Connect minimum 3/8" water line to the Follett Single System inlet. Use a minimum 3/4" for the Follett Twin System.
6. Connect tubing to flushing valve and run to drain. The cross fitting has a flushing valve installed on the bottom.
Note: Some municipal plumbing codes and good sanitary practices require an air gap at the drain termination point.
7. Shut off the system inlet valve located on the inlet of the prefilter head.
8. Check to be sure the o-ring on the prefilter housing is sufficiently lubricated. Use a good grade of silicone lubricant, if needed. Position the prefilter cartridge on guide seat in the bottom of the housing. Then thread the prefilter housing into the head by hand. Use a sump wrench to snug the housing onto the head.
9. Install the carbon filter cartridge(s) into the filter head(s) following directions on the cartridge label or as shown in the Cartridge Change illustrations.
10. Turn on inlet water to the filter system and check for leaks.
11. Open the flushing valve and flush the cartridge(s) by running water through at full force for five minutes. This will set the filtering media and purge any air and fines, insuring maximum filter life. See illustrations.
12. After flushing, close the flushing valve, turn on power to equipment.

For installations in Massachusetts, the Commonwealth of Massachusetts Plumbing Code 248 CMR shall be adhered to. Consult your licensed plumber for installation of the system. This system and its installation must comply with state and local regulations.

CARTRIDGE CHANGE DETERMINATION

Replace the prefilter cartridge whenever it becomes excessively dirty (observed visually or by flow restriction). Follow the change instructions provided with the cartridge. Replace carbon filter cartridges when capacity is reached, or when flow becomes inadequate, but no later than 6 months from date of install. All carbon filter cartridges on multiple cartridge systems should be changed at the same time. The system pressure gauge provides a quick, simple means of determining when the filter cartridge(s) should be checked. Installed on the system outlet manifold, the gauge can be used to monitor both dynamic (flowing) and static (line) pressure. The cartridge(s) should be changed when the pressure gauge needle is in the red area while equipment is in operation, and yet the needle shows adequate line pressure between cycles. Observe the needle during the next equipment on cycle. If the needle registers adequate pressure, it can be assumed that the temporary low-pressure condition was caused by a brief power failure or other incoming pressure disruption. If the low pressure condition is not due to an external condition, check/change the prefilter first. If the low pressure condition is still not corrected, change the carbon filter cartridges.

FLUSHING

For maximum life, all carbon filter cartridges must be flushed for five minutes at full flow before use.

ALL NEW CARTRIDGES MUST BE FLUSHED AFTER EACH CARTRIDGE CHANGE BEFORE BEING PUT INTO SERVICE!

If the cartridges are new, have been properly flushed and both needle and follower register inadequate pressure, you may be experiencing inadequate water pressure or some restriction may exist in the inlet water line. In either case, the incoming water pressure must be improved to receive optimum filter life.

COMPLETE CARTRIDGE CHANGE INSTRUCTIONS CAN BE FOUND ON THE FILTER CARTRIDGE LABEL.

Not for residential use. For food service applications only.

Check for compliance with state and local laws and regulations. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

REPLACEMENT PARTS

Contact Follett Corporation at 800.523.9361 for filter cartridges.


Description	Part Number
Prefilter Cartridge	00130211
Primary Filter Cartridge	00130245
Outlet Pressure Gauge	EV3114-09A
Inlet Valve	EV3114-07
Flushing Valve (FL4S Single)	EV3102-01
Flushing Valve (FL4S Twin)	EV3114-07
O-Ring for Prefilter	EV3112-40
Prefilter Housing	EV3112-39



System Tested and Certified by NSF International against NSF/ANSI Standard 42 and 53 for the reduction of:

Std. No. 42—Aesthetic effects	Std. No. 53—Health effects
Chemical Reduction	Mechanical Filtration
Taste & Odor	Cyst
Chlorine	
Mechanical Filtration	
Nominal Particulate Class I	

PRESSURE GAUGES

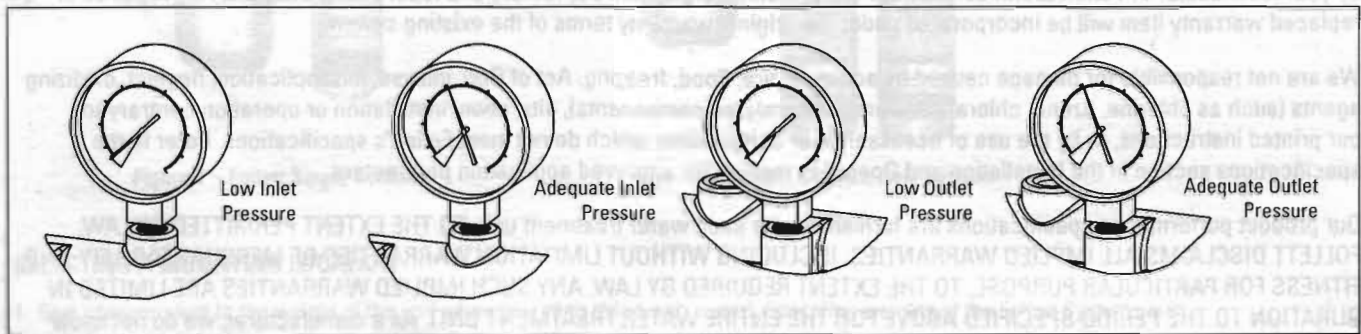

CARTRIDGE CHANGE PROCEDURE

<p>E-Series Prefilter Cartridge Change</p> <ol style="list-style-type: none"> Shut off power to equipment. Shut off inlet water ahead of system. 	<ol style="list-style-type: none"> Push red relief valve. Unscrew bowl. Remove prefilter cartridge. 	<ol style="list-style-type: none"> Clean bowl with filtered water only. NO SPECIAL CLEANERS. Feel head o-ring. If dry, lubricate with high quality silicone lubricant. 	<ol style="list-style-type: none"> Install new prefilter cartridge in bowl. Hand tighten bowl onto head. 	<ol style="list-style-type: none"> Turn on water. Turn on power to equipment.
<p>Everpure Carbon Filter Cartridge Change</p> <ol style="list-style-type: none"> Shut off power to equipment. Shut off inlet water ahead of system. 	<ol style="list-style-type: none"> Open flushing valve to relieve pressure. Hold head firmly and push upward. Turn cartridge to left until it stops. 	<ol style="list-style-type: none"> Pull cartridge downward and out of head. Hold head firmly. Align cartridge lug with label. Insert new cartridge firmly into head. 	<ol style="list-style-type: none"> Turn cartridge right 90° until rotation stops. 	<p>Flushing</p> <ol style="list-style-type: none"> Repeat steps 3-6 for remaining cartridges. With flushing valve fully open, open inlet water at full force for five minutes. Close flushing valve.

LIMITED WARRANTY

Commercial Water Treatment Equipment

You have just purchased one of the finest water treatment units made. As an expression of our confidence in Follett products, this product is warranted against defects in material and workmanship to the original end-user when installed in accordance with Follett specifications. The warranty period commences from the date of purchase and is administered as follows:

For a period of ONE YEAR	Replaceable elements (i.e., filter & water treatment cartridges)*
For a period of FIVE YEARS	The entire system (excluding replaceable elements)

***This is for material & workmanship, not filter or water treatment cartridge life.**

The unit must be used in operating conditions that conform to Follett's recommended design guidelines. This warranty will not apply if the unit has been modified, repaired or altered by someone not authorized by Follett.

If a part described above is found defective within the specified period, you should notify Follett technical service at the phone number listed below. Any part found defective within the terms of this warranty will be repaired or replaced (at Follett's discretion) by your local dealer or Follett technical service. You pay only freight from our factory and local dealer charges. Any repaired or replaced warranty item will be incorporated under the original warranty terms of the existing system.

We are not responsible for damage caused by accident, fire, flood, freezing, Act of God, misuse, misapplication, neglect, oxidizing agents (such as chlorine, ozone, chloramines and other related components), alteration, installation or operation contrary to our printed instructions, or by the use of accessories or components which do not meet Follett's specifications. Refer to the specifications section in the Installation and Operating manual for approved application parameters.

Our product performance specifications are furnished with each water treatment unit. TO THE EXTENT PERMITTED BY LAW, FOLLETT DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE; TO THE EXTENT REQUIRED BY LAW, ANY SUCH IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE PERIOD SPECIFIED ABOVE FOR THE ENTIRE WATER TREATMENT UNIT. As a manufacturer, we do not know the characteristics of your water supply or the purpose for which you are purchasing this product. The quality of water supplies may vary seasonally or over a period of time, and your water usage rate may vary as well. Water characteristics can also differ considerably if this product is moved to a new location. For these reasons, we assume no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligations for us. Further, we assume no liability and extend no warranties, express or implied, for the use of this product with a non-potable water source or a water source which does not meet the conditions for use described in the owner's guide or performance data sheet for this product. OUR OBLIGATIONS UNDER THIS WARRANTY ARE LIMITED TO THE REPAIR OR REPLACEMENT (AT FOLLETT'S DISCRETION) OF THE FAILED PARTS OF THE WATER TREATMENT UNIT, AND WE ASSUME NO LIABILITY WHATSOEVER FOR DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, GENERAL OR OTHER DAMAGES.

Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Similarly, some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Consult your telephone directory for your local independently operated Follett dealer, or write Follett for warranty and service information.

FOLLETT
by **EVERPURE**

For sales, replacement components, and service, contact your Follett dealer or:
801 Church Lane • Easton, PA 18040 • Tel: 800.523.9361 • Fax: 610.250.0696
www.follettice.com



EVERPURE

Pentair Water

**LIMITED
WARRANTY**

You have just purchased one of the finest water treatment units made. As an expression of our confidence in Everpure products, this product is warranted against defects in material and workmanship to the original end-user when installed in accordance with Everpure specifications. The warranty period commences from the date of purchase** and is administered as follows:

For a period of ONE YEAR **Replaceable elements (i.e., filter & water treatment cartridges)***

For a period of FIVE YEARS **The entire system (excluding replaceable elements)**

***This is for material & workmanship, not filter or water treatment cartridge life.**

**** PROOF OF PURCHASE REQUIRED.**

The unit must be used in operating conditions that conform to Everpure's recommended design guidelines. This warranty will not apply if the unit has been modified, repaired or altered by someone not authorized by Everpure.

If a part described above is found defective within the specified period, you should notify Everpure technical service at the phone number listed below. Any part found defective within the terms of this warranty will be repaired or replaced (at Everpure's discretion) by your local dealer (labor not covered). Any repaired or replaced warranty item will be incorporated under the original warranty terms of the existing system.

We are not responsible for damage caused by accident, fire, flood, freezing, Act of God, misuse, misapplication, neglect, oxidizing agents (such as chlorine, ozone, chloramines and other related components), alteration, installation or operation contrary to our printed instructions, or by the use of accessories or components which do not meet Everpure's specifications. Refer to the specifications section in the Installation and Operating manual for approved application parameters.

Our product performance specifications are furnished with each water treatment unit. **TO THE EXTENT PERMITTED BY LAW, EVERPURE DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE; TO THE EXTENT REQUIRED BY LAW, ANY SUCH IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE PERIOD SPECIFIED ABOVE FOR THE ENTIRE WATER TREATMENT UNIT.** As a manufacturer, we do not know the characteristics of your water supply or the purpose for which you are purchasing this product. The quality of water supplies may vary seasonally or over a period of time, and your water usage rate may vary as well. Water characteristics can also differ considerably if this product is moved to a new location. For these reasons, we assume no liability for the determination of the proper equipment necessary to meet your requirements, and we do not authorize others to assume such obligations for us. Further, we assume no liability and extend no warranties, express or implied, for the use of this product with a non-potable water source or a water source which does not meet the conditions for use described in the owner's guide or performance data sheet for this product. **OUR OBLIGATIONS UNDER THIS WARRANTY ARE LIMITED TO THE REPAIR OR REPLACEMENT (AT EVERPURE'S DISCRETION) OF THE FAILED PARTS OF THE WATER TREATMENT UNIT, AND WE ASSUME NO LIABILITY WHATSOEVER FOR DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, GENERAL OR OTHER DAMAGES.**

Some states do not allow the exclusion of implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Similarly, some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Consult your telephone directory for your local independently operated Everpure dealer, or write Everpure for warranty and service information.

Everpure, LLC.

1040 Muirfield Drive • Hanover Park, Illinois 60133

Phone 630.307.3000 • Toll Free 800.323.7873

Everpure Technical Service 800.942.1153