


# Shelving System



- Suitable for ORs, clean rooms, labs, medical offices, etc.
- Virtually any length or height possible. Shelf depths from 4" to 30" deep.
- Heavy gauge type 304 stainless steel with #4 finish or powder coated steel.
- Shelf supports of heavy 1/2" square stainless tubing, not just steel sheet.
- Shelves cannot be inadvertently jarred off supports.
- Shelves have built-in backstop.
- Very simple assembly and installation with step by step instructions.
- Load capacity dependent on size and configuration, calculated on request.


# Shelving System

Side View

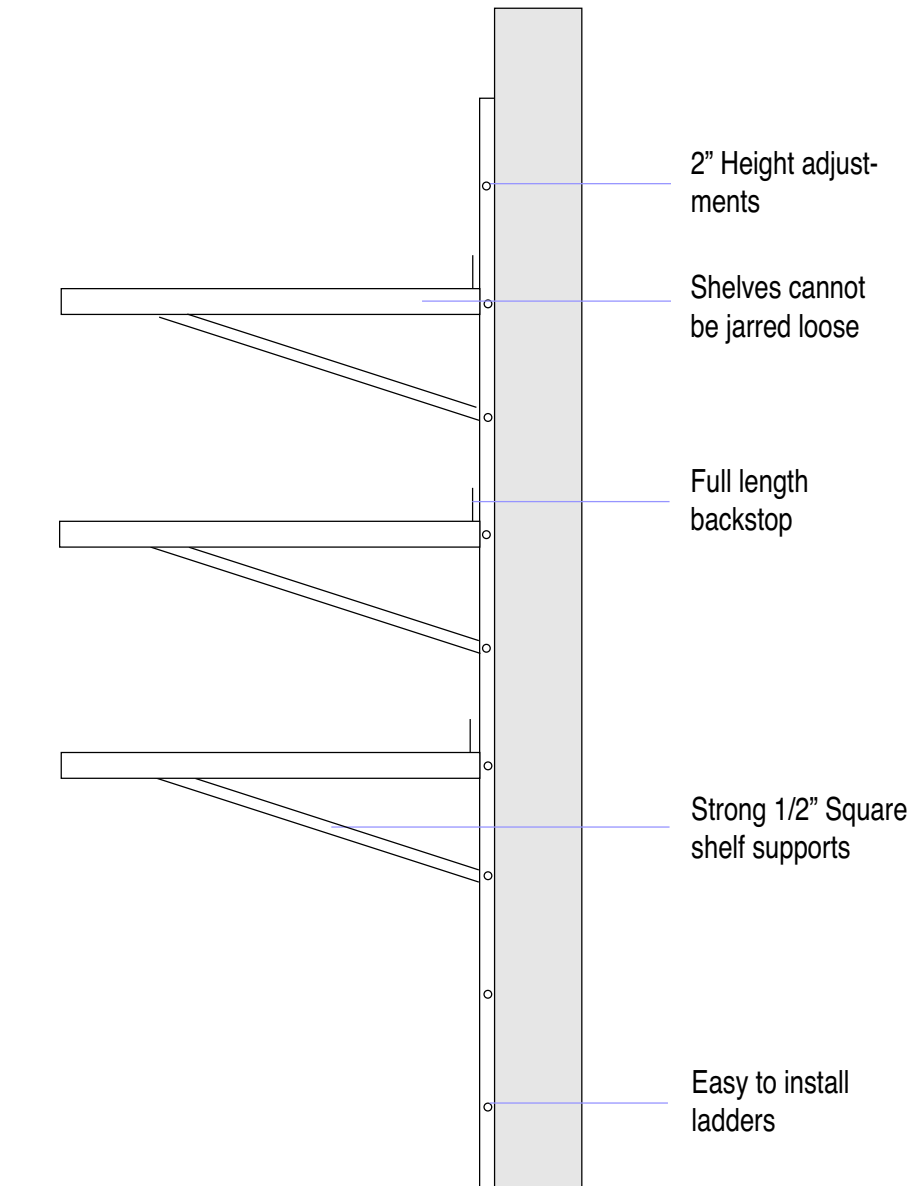

# Shelving System

Top View

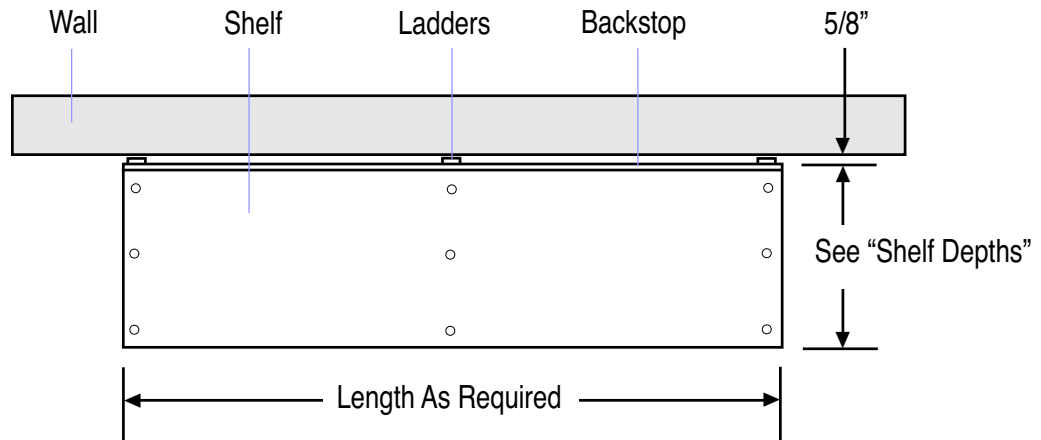


Shelf Depths: 4", 6", 8", 10", 12", 14", 16", 18", 20", 22", 24", 26", 28", 30"

Ladders available in 12" increments.

Shelf supports / ladders are generally recommended every 36" in shelf lengths.

## Model Numbers

Shelves are sold in complete sets. Any number of sets can be ordered and installed in the same location. The model number specifies all aspects of a particular set.

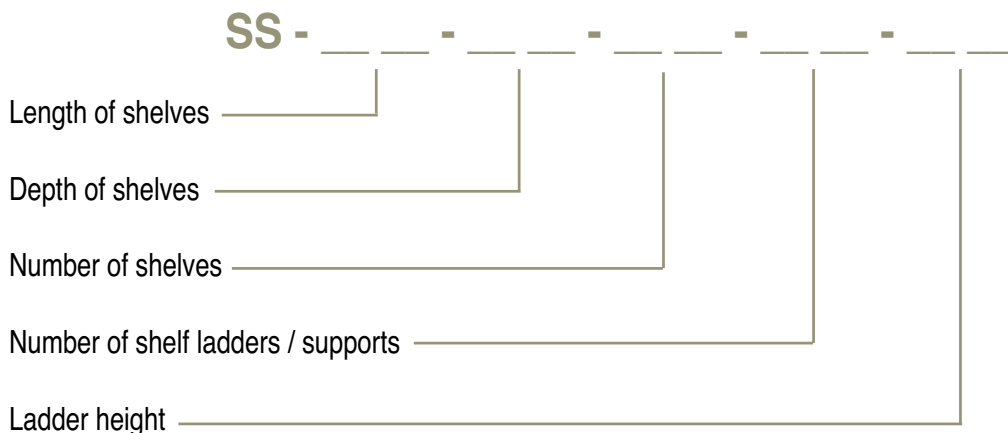


# Carr Shelving System

## Installation, Operation & Maintenance

Manual No. 361 Revised 9.5.06

### 1 Ladder installation

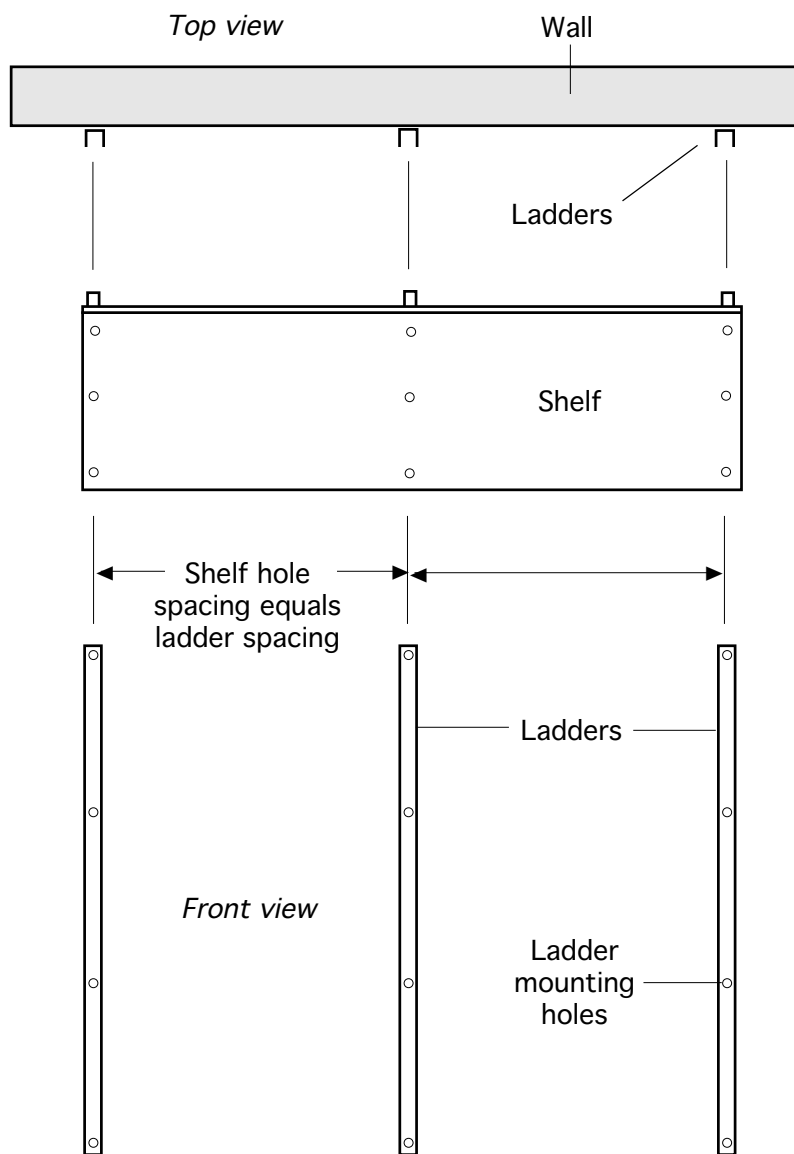

#### Installation

1. Measure distance between hole centers on shelf. This will be the same distance between ladder centers when they are mounted on the wall.
2. Mount ladders on wall using fasteners suitable for wall material.



(Continued on reverse side)

# Carr Shelving System

## Installation, Operation & Maintenance

Manual No. 361 Revised 9.5.06

### 2 Shelf Installation

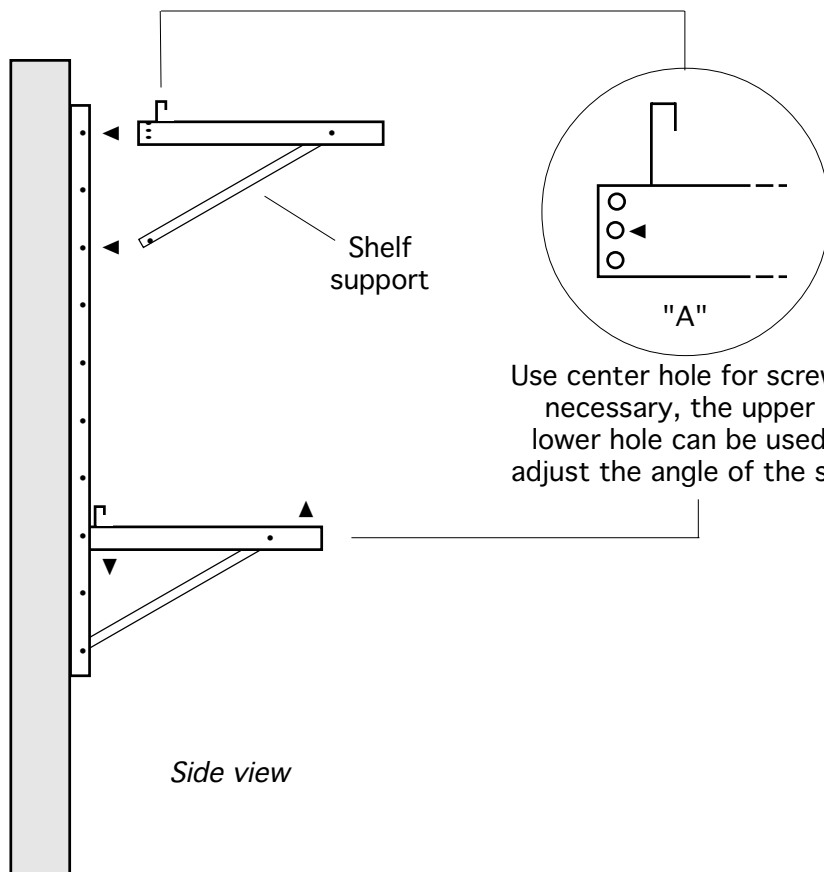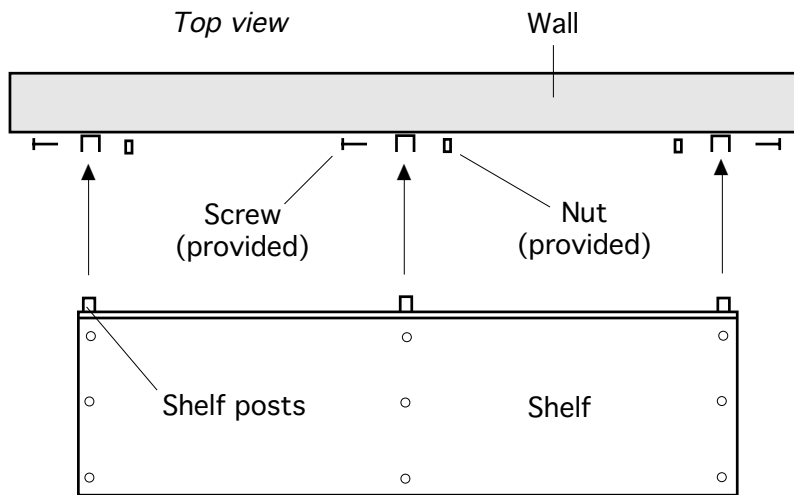

#### Installation (continued)

3. Insert shelf posts into ladders as shown. If shelf does not fit, it may be necessary to loosen ladders and reposition.
4. Insert provided screws into ladders, through center hole on shelf posts (see picture "A"). Secure with provided nut.
5. Insert screws into ladders and through shelf supports and secure with provided nut.
6. If necessary, reposition screw on shelf post to upper or lower holes to adjust the angle of the shelf (See picture "A").

#### Maintenance

The shelves are maintenance free. To clean, use a mild detergent with water and a clean rag. A light coat of mineral oil will make the stainless steel shine.