

# Narcotic Locker NL-20



- Larger size wall mounted narcotics cabinet with enhanced security.
- Double door, one behind the other.
- Heavy gauge stainless steel double wall construction with strengthening reinforcements and welded inner core.

The Carr NL-20 is a stand alone wall mounted narcotics cabinet with enhanced size and security.

Two doors, one behind the other, provide layered security. Each door has one replaceable core lock, each lock keyed differently. The outer door cannot be closed if the key is inadvertently left in the inner door.

Constructed entirely of double wall heavy gauge stainless steel with corner overlapping reinforcements and a welded inner core for added strength and rigidity. Doors are double wall with strengthening reinforcements and have a full length stainless steel piano hinge. One end of hinge pin is welded to prevent removal. Interior is flush with no blind space behind front frame and has three height adjustable shelves standard.



Overall size is 18" wide, 30" high, 12" deep.

Optional is an interior switch that activates a remote warning light when door is opened. Remote warning light also optionally available, 110 volts.

Model	Description
NL-20	Narcotics locker cabinet, 2 door
NS-30	Signal light switch
NB-40	Signal light

**CARR NARCOTICS LOCKER,  
WALL MOUNTED  
MODEL NL-20**

DATE: 8/22/06 SCALE: NOT TO SCALE  
DRAWN BY: *jjr*

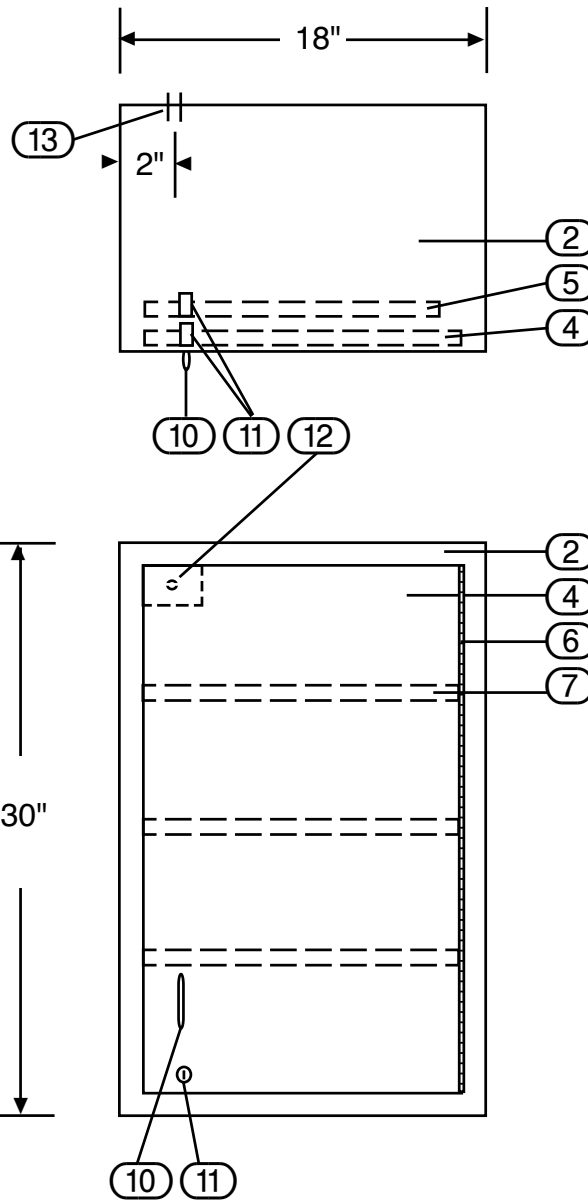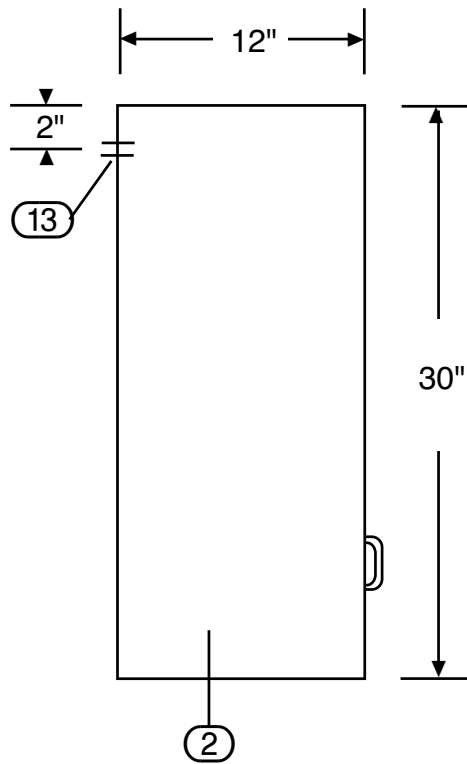

- 1. TYPE 304 STAINLESS STEEL CONSTRUCTION
- 2. ELECTRO-GALVANIZED STEEL CONSTRUCTION
- 3. PAINT COLOR TAN
- 4. DOOR, DOUBLE WALL CONSTRUCTION
- 5. DOOR, INTERIOR, DOUBLE WALL CONSTRUCTION
- 6. PIANO HINGE, FULL LENGTH, INSTITUTIONAL TYPE
- 7. SHELF, HEIGHT ADJUSTABLE IN 1/2" INCREMENTS ON CADMIUM PLATED STEEL CLIPS
- 8. SHELF LATTERS, FLUSH PERFORATIONS IN CABINET INTERIOR, NOT SHOWN
- 9. NYLON ROLLER DOOR CATCH, SPRING LOADED, NOT SHOWN
- 10. WIRE PULL HANDLE, BRASS, CHROMIUM PLATED
- 11. CYLINDER DOOR LOCK, INDIVIDUALLY KEYED, KEY REMOVABLE IN LOCKED POSITION ONLY
- 12. MICRO SWITCH FOR REMOTE WARNING LIGHT, (WARNING LIGHT NOT INCLUDED)
- 13. 7/8" DIA. K.O. FOR 120 VOLT ELECTRICAL HOOK-UP
- 14. DOUBLE WALL CONSTRUCTION THROUGHOUT

NOTE: ONLY ITEMS WITH MARKED BOXES ARE INCLUDED.

**CARR**